



SIERRA-OLYMPIA

TECHNOLOGIES INC.

VENTUS HD6-0.6

USER GUIDE

603 Portway Avenue, Suite 100 | Hood River, OR 97031 | 855.222.1801 | www.sierraolympia.com

Product Export Classification Control Number (ECCN): 6A003.b.4.a. This document does not contain export-controlled technology

Contents

1	Safety Conditions	2
2	Export Notice.....	2
3	Reference Documents.....	2
4	Introduction.....	2
5	Included Items.....	3
6	Quick start guide.....	4
7	WIND Viewer Sensor Tab.....	8
8	3G/HD-SDI Accessory Installation	9
9	Nonuniformity Correction	11
10	Integration Considerations	12
11	Revision History	13

Table of Figures

Figure 1: Ethernet Connection.....	4
Figure 2: Power Connection	5
Figure 3 SightLine Enable HDMI	5
Figure 4 Save Parameter to Board	6
Figure 5: HDMI Connection.....	6
Figure 6: Connection Dropdown	7
Figure 7 WIND Viewer Sensor Tab.....	8
Figure 8 SDI Bracket	9
Figure 9 Install SDI board.....	10
Figure 10 FCC and Power Cable Installation.....	10
Figure 11 SDI connector	11

1 SAFETY CONDITIONS

Read all instructions prior to use.

Observe electrostatic discharge (ESD) precautions when handling.

The camera requires reasonable thermal sinking when operating. Use stirred air and conduction to outside environment when installed in an enclosure.

The camera must be operated within its environmental limits.

Repairs and service are to be completed only by Sierra Olympia Technologies. Please refer any technical issues to support@sierraolympia.com.

2 EXPORT NOTICE

Product Export Classification Control Number (ECCN): 6A003.b.4.a. This document does not contain export-controlled technology.

3 REFERENCE DOCUMENTS

Document Number	Document Title
20-70043	Mechanical ICD, Ventus HD6-0.6
S-D03-10409	WIND Firmware API
S-D07-10496	WIND Viewer User Guide
20-70005	Electrical ICD, Ventus HD6
1043862	ICD for the HexaBlu Baseline OEM Camera Core (by DRS)

4 INTRODUCTION

The Ventus HD6-0.6 is ready to operate out of the box. This guide will provide a walkthrough of the minimum setup to begin imaging.

The Ventus HD6-0.6 is an MWIR imager designed to be integrated into end-user products by integrators and OEMs. This user guide will cover basic usage and limits of the product. More detailed technical information (including software protocol, connector locations and pinouts, etc.) may be found in the referenced ICDs (interface control documents).

The main elements of the Ventus HD6-0.6 camera are the DRS HexaBlu Sensor, calibration shutter, lens, chassis, and a video processing engine which is referred to as the SightLine processor, or SLA. The SLA serves as the central processor for the camera and performs video render/processing, IP encoding, and control of the sensor subsystem. Control commands are sent to the SLA and may be passed through to subsystems in a fashion further described in the WIND Firmware API.

WARNING! Do not update Sightline firmware without consulting Sierra-Olympia Technical Support. Update with an unqualified firmware version can interrupt camera functionality.

A sample user interface (WIND Viewer) is included on the delivery disk to demonstrate functionality of video encoding and control command structure. This quick start guide will describe camera operation using WIND Viewer.

The Ventus HD6-0.6 may be installed in an enclosure that protects the camera from the elements and provides field-friendly connectors using patch cables to the camera's interfaces as defined by the electrical ICD. The command interface and protocol are suitable to build camera functionality into end-user applications.

5 INCLUDED ITEMS

The packaging contains:

- Ventus HD6-0.6 camera
- Cable kit (if ordered)
- USB Delivery drive
 - WIND Viewer
 - ICDs and documentation

5.1 Cables

Optional cables are available. See 20-70005 Electrical ICD, Ventus HD6 for additional connection information.

Cable Name	SOTI PN	Manufacturer PN
Input Power Cable	S-A07-10237 or S-A07-10497	NA
Serial camera control	S-A07-10236	NA
Ethernet	S-A07-10240	NA
HDMI	S-C11372	Tripp-Lite P142-06N-Micro
Camera Link Adapter Kit	S-A07-10251	NA
SDI Cable	S-C11467	Pasternack PN PE3W01637-36
HD-SDI Assembly, SLA 4000, Ventus HD6	S-C11372	NA

6 QUICK START GUIDE

6.1 Connect the Ethernet cable.

- 6.1.1.1 Connect the provided Picoblade-terminated Ethernet cable to J11. The camera can be connected to a managed network, a switch or directly to a computer. The camera has been preconfigured to obtain an IP address automatically from a DHCP server or from link-local addressing.

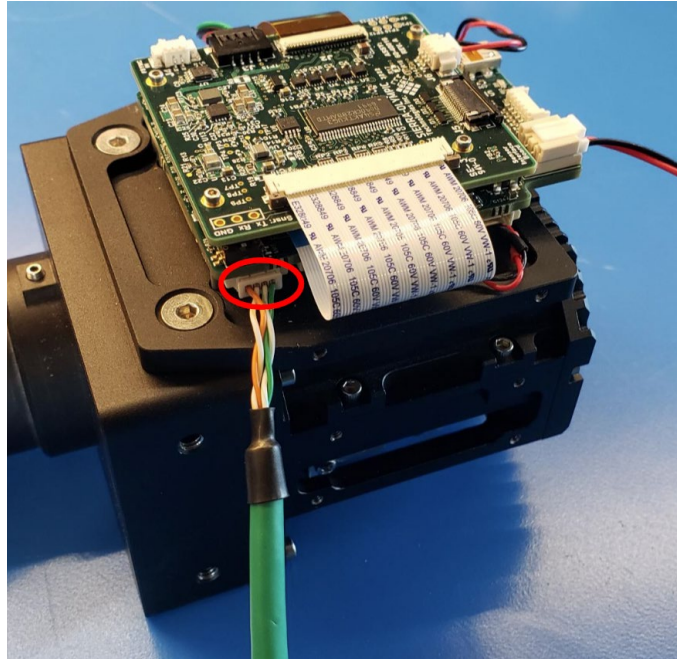


Figure 1: Ethernet Connection

6.2 Connect power cable.

- 6.2.1 Connect the provided Sherlock-terminated power cable to J1 as shown in Figure 2. The nominal input voltage is 12VDC (max 14V) with a minimum 5A supply.

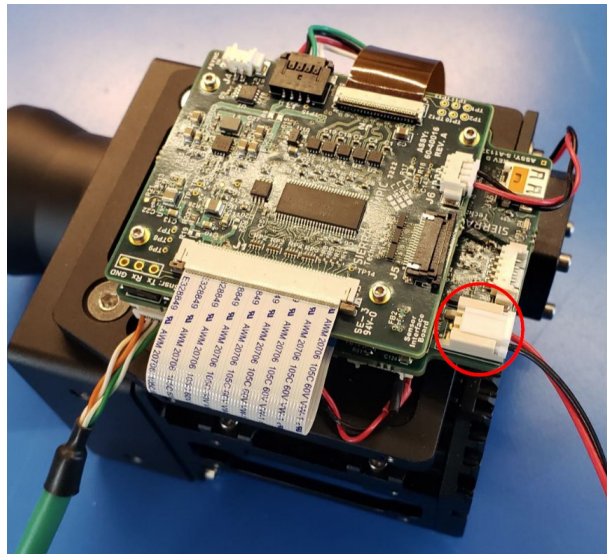


Figure 2: Power Connection

6.3 Optional HDMI Connection

- 6.3.1 Enable HDMI. To do this in SLA Panel Plus connect to the camera and then in the Video Output drop down select HDMI or HDMI & Net.

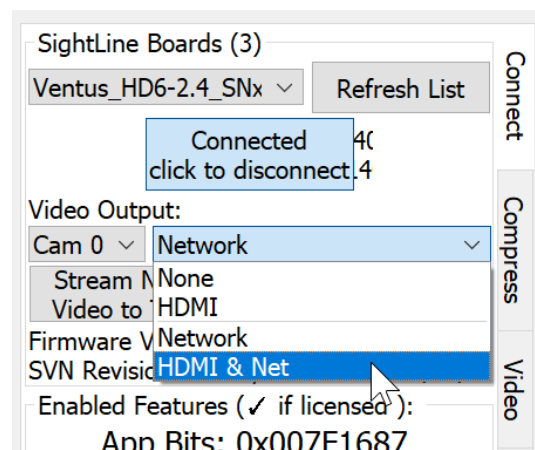


Figure 3 SightLine Enable HDMI

- 6.3.2 If HDMI will be used regularly, under parameters select save to board, then select reset and click reset board. We recommend that the "separate net/HDMI resolutions" box is checked before saving to board, this will keep the sensor cooldown graphics properly aligned. Panel Plus has a known issue with failing to remember this setting, we recommend always making sure that the box has been set as intended.

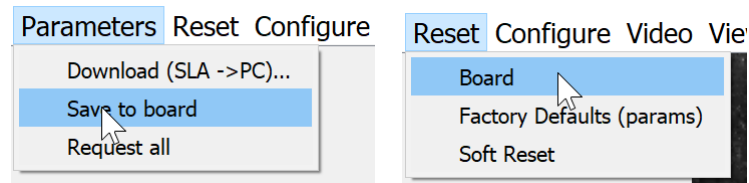


Figure 4 Save Parameter to Board

- 6.3.3 Connect a type D Micro-HDMI cable to J16. The HDMI output may be connected to an HDMI monitor or capture card.

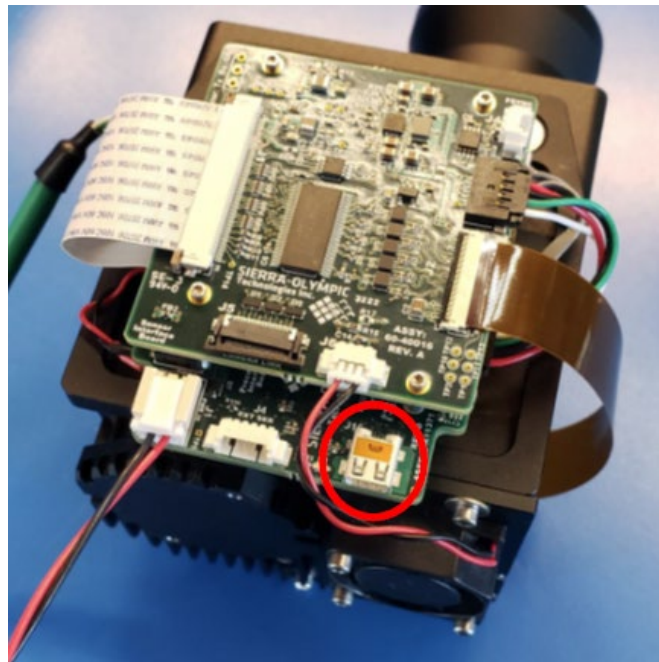


Figure 5: HDMI Connection

6.4 WIND Viewer – Connection Procedure

6.4.1 Establish IP Connection

- 6.4.1.1 Install WIND Viewer from the USB delivery drive.
- 6.4.1.2 Launch WIND Viewer.
- 6.4.1.3 All available SLA-equipped cameras on the network will appear in the “Camera” dropdown list, identified by IP address and serial number. The camera has been preconfigured to obtain an IP address automatically from a DHCP server or from link-local addressing.

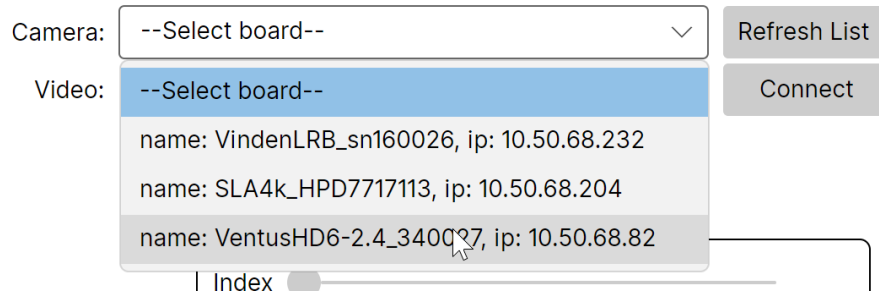


Figure 6: Connection Dropdown

6.4.1.4 If the camera does not appear in the list, do the following:

- Verify the camera has had enough time to initialize. The cooling fan will start after initialization (approximately 1 minute after power on).
- Click **Refresh**.
- Make sure that your computer is on the same subnet as the camera.
- Verify ethernet cable was connected to both the camera and the network/computer prior to power being applied.

6.4.1.5 To connect to the camera, select the camera from the drop-down and click **Connect**.

6.4.1.6 When the Connect button changes to Disconnect, you have successfully established connection.

6.4.2 Stream Video

6.4.2.1 Ethernet video begins streaming immediately over UDP to the local computer's IP address on port 15004.

6.4.2.2 Live video should appear in the WIND Viewer main window.

6.4.2.3 Video streaming may be more intricately configured through the full communication protocol.

6.4.2.4 Explore camera functions in WIND Viewer. There is nothing in this application that can damage the camera or is irreversible.

7 WIND VIEWER SENSOR TAB

WIND Viewer 3 collects sensor information directly from the sensor core. See DRS ICD PN 1043862 ICD for the HexaBlu Baseline OEM Camera Core for command details. This information is available on the "Sensor" tab.

Control Video Record Sensor

Status

FPT CPT FDT

ETI Refresh

Version

VER

MSN

Diagnostics

BTS

STS

Refresh
Do BIT

Save Log

Figure 7 WIND Viewer Sensor Tab

Wind Viewer 2.x is supported for playback, but will not receive updates.

8 3G/HD-SDI ACCESSORY INSTALLATION

A kit is available for separate purchase to enable SDI output (configured by the Sightline). The kit contains electronics, mounting equipment, and cables. The following instructions are provided to mount the kit on the chassis; the kit may also be remote mounted.

HDMI and SDI can not be operated simultaneously. The camera is configured to operate HDMI by default.

- 8.1.1 Install the SDI bracket with two M2.5 4mm flat head screws. Apply loctite 242 and torque to 2.8 in-lbs.

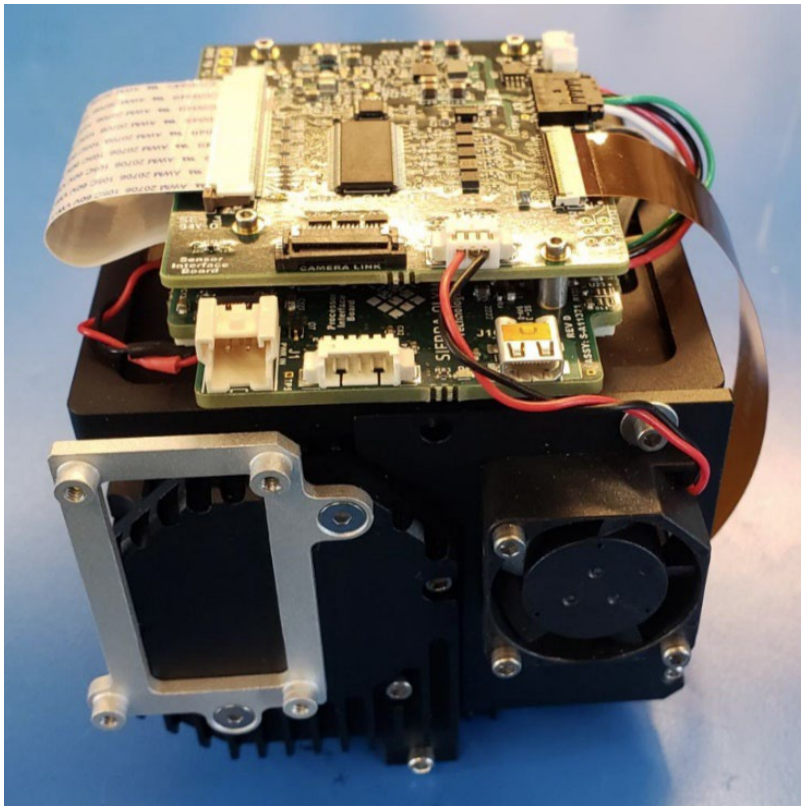


Figure 8 SDI Bracket

- 8.1.2 Install the SDI board with four 2-56 1/4in socket head screws. Apply loctite 242 and torque to 2.1 in-lbs.

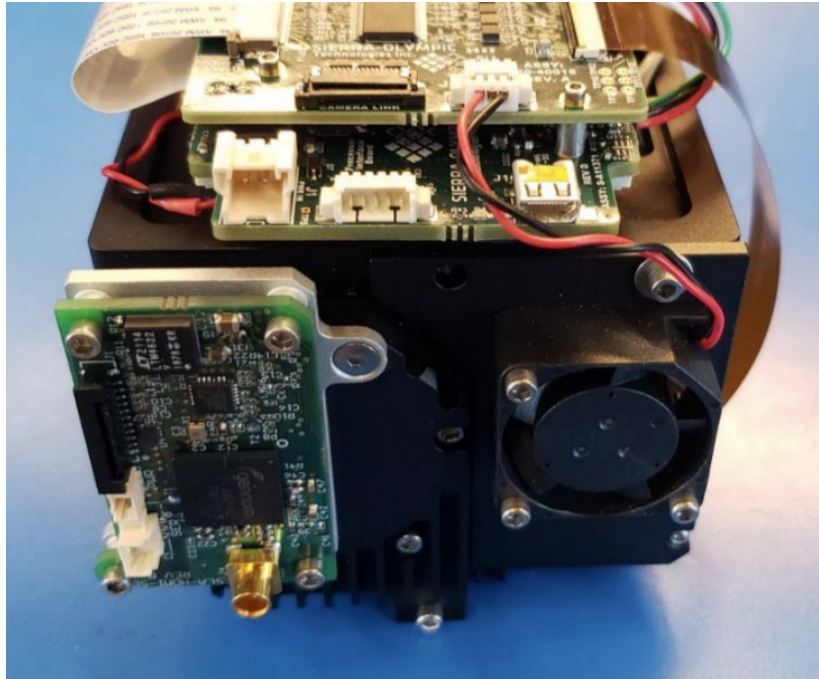


Figure 9 Install SDI board.

8.1.3 Install the FFC and power cables

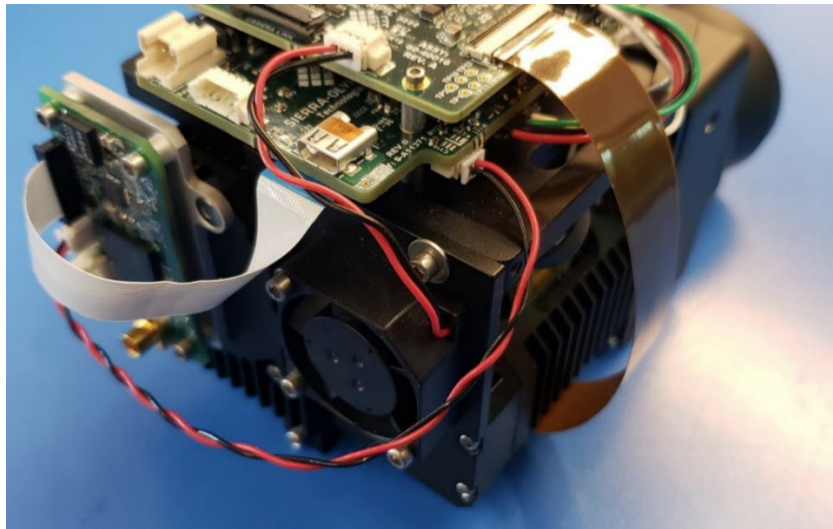


Figure 10 FCC and Power Cable Installation

8.1.4 Plug in the SDI cable to the SDI connector.

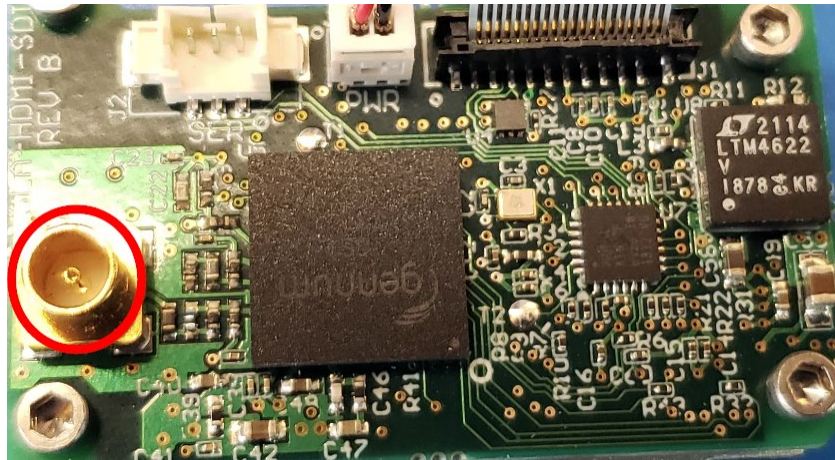


Figure 11 SDI connector

- 8.1.5 Once the SDI accessory kit is installed power the camera. Once powered, configure the HDMI output as explained in sec 6.3; this will enable SDI output from the adapter board.

9 NONUNIFORMITY CORRECTION

9.1 NUC

The Hexablu sensor has multiple modes that correspond to 2-point (gain) NUC tables and integration times. The Ventus HD6-0.6 is calibrated with through-lens NUC at the integration times listed below. It is recommended to change modes based on scene temperature / photon flux.

Scene temperatures were determined from room temperature radiometry data. Results may vary depending on weather (rain, humidity etc) and range (atmospheric attenuation and turbulence). According to the Beer-Lambert Law, approximately 85% of mid-wave infrared (MWIR) light is transmitted per kilometer, which increases the recommended scene temperature range for the one kilometer target.

NUC Table	Integration Time	Frame Rate	Calibration Temperature	Recommended Scene Temperature, ~1kmtarget
0	10ms	60Hz	50 to 90C	35 to 110C
1	16ms	60Hz	30 to 70C	5 to 95C
2	32ms	30Hz	10 to 40C	-30 to 65C

9.2 FFC

The Ventus HD6-0.6 is equipped with a shutter to perform Flat Field Corrections (FFCs). By default, the camera will automatically perform an FFC 20 seconds after the sensor finishes initializing, and 1 second after the camera is commanded to switch NUC tables.

These automatic FFCs can be configured or disabled by editing the SotiParams.xml file stored on the camera's filesystem, located in the /home/slroot/soti directory.

The StartupFFCDelay param sets the delay of the post initialization FFC in seconds, if it is set to 0 this feature will be disabled.

The TableSwitchFFCDelay param sets the delay of the automatic FFC after commanding a new NUC table, if it is set to 0 the feature will be disabled.

Values for both params are limited to integers between 0 and 4,000,000.

FFCs may be commanded manually with the Execute FFC button in Wind Viewer, or via the Do Flat Field Correction (0x82) command in the Wind API.

10 INTEGRATION CONSIDERATIONS

- The Ventus HD6-0.6 dissipates approximately 11.5W of heat, please see the corresponding 20-70043 Mechanical ICD, Ventus HD6-0.6 for heatsinking surfaces. When enclosed, stirred air is recommended, the volume wall should promote conduction to ambient air.
- The Ventus HD6-0.6 includes a removable tripod mount and handles. The tripod mount has ¼-20 threaded holes for convenience of mounting for demonstration. In integration it is recommended to use the primary mounting holes identified on 20-70043 Mechanical ICD, Ventus HD6-0.6.
- The DRS HexaBlu sensor may be accessed using 'pass-through' commands in the WIND protocol. Please reference the WIND Firmware API (S-D03-10409) and DRS ICD (1043862) documents for additional information
- The below table lists the Effective Focal Length (EFL) as a function of Zoom Index. The EFL values are reported from the lens manufacturer and the Horizontal Field of View (HFOV) values are calculated (without accounting for optical distortion). The as-measured FOV may differ slightly due to optical distortion and as-built tolerances. This data is only provided for the purpose of understanding the design and behavior of the zoom function.

Zoom Index	EFL (mm)	HFOV (deg)	FOV ratio (Z/(Z-1))
0	50.0	8.78	
1	65.3	6.73	1.30
2	85.2	5.16	1.30
3	111.3	3.95	1.31
4	145.3	3.03	1.30
5	189.7	2.32	1.31
6	247.7	1.77	1.31
7	323.5	1.36	1.30
8	422.3	1.04	1.31
9	551.4	0.80	1.30
10	720.0	0.61	1.31

11 REVISION HISTORY

Revision	Date	Description	ECO
Rev A	2024-05-07	Initial Release	1734